



Valve Replacement

Top view of Valve Rack

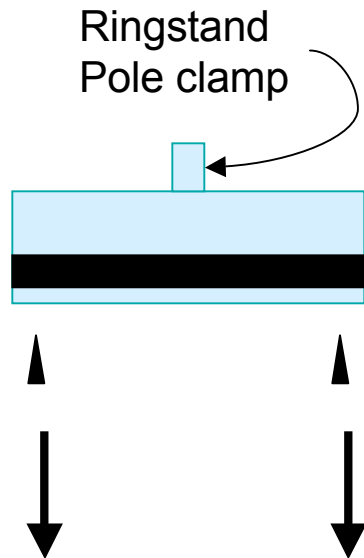

Unscrew two Outside screws On faceplate.

Front view of Valve Rack

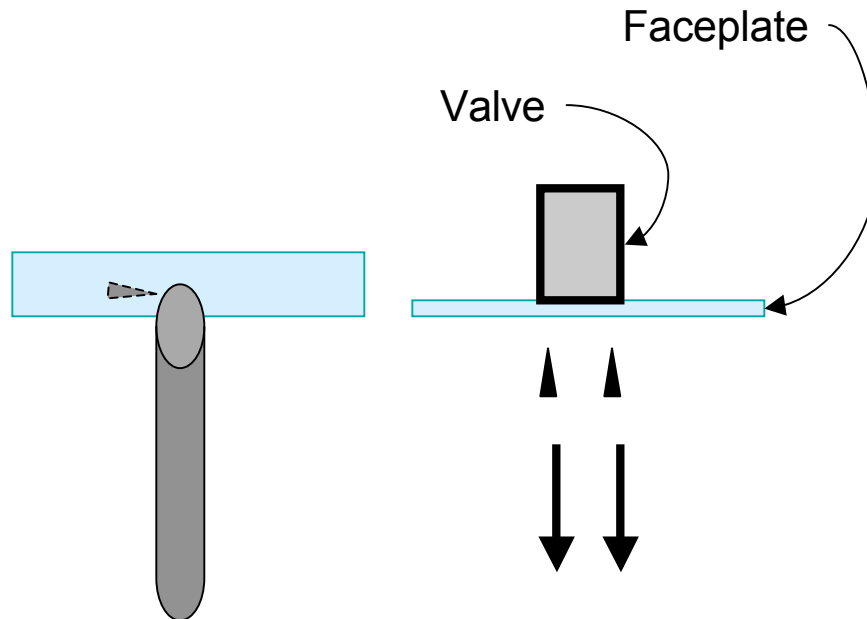

Back out set Screw securing Black accordion Tubing to valve rack. Screw is inside rack.

Unscrew two Screws retaining Valve to faceplate.

Detach dead valve, Being careful when Pulling valve wires Through slot in Accordion tubing. Reverse process, being Careful to secure LED In Faceplate before reattaching Faceplate To front of Valve Rack.

Sept 17, 2003