


Nut & Ferrule Attachment

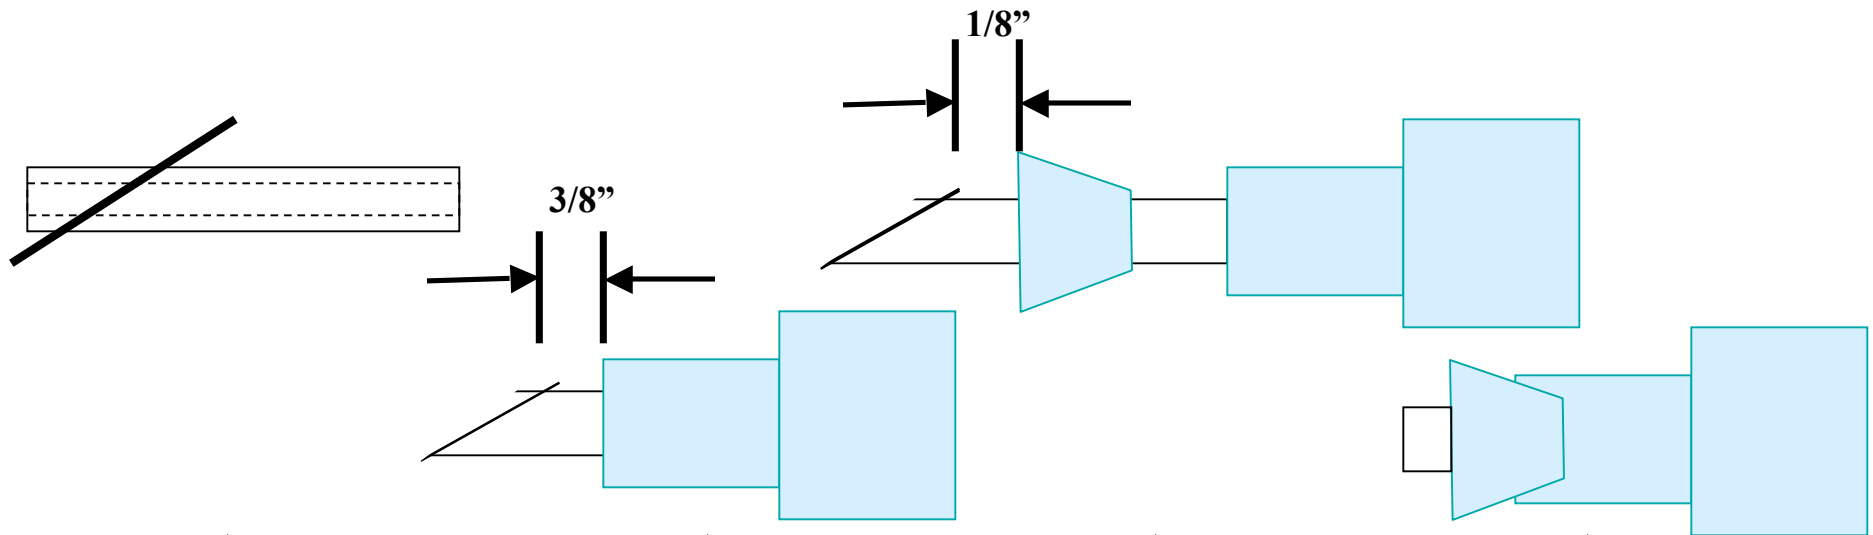

↑
Cut off the end of the Teflon tubing with a sharp blade at approx. 30 degrees.

↑
Insert angled end of tubing through nut, leaving 3/8".

↑
Push compression washer (ferrule) over Teflon tubing (O.D. 1/16")

↑
Cut off angled end of tube with a sharp blade. Tube to extend 1/16" beyond washer.

August 11, 2003



AutoMate Scientific