


Perfusion Pressure Kit (#09-04, 09-08 & 09-16)

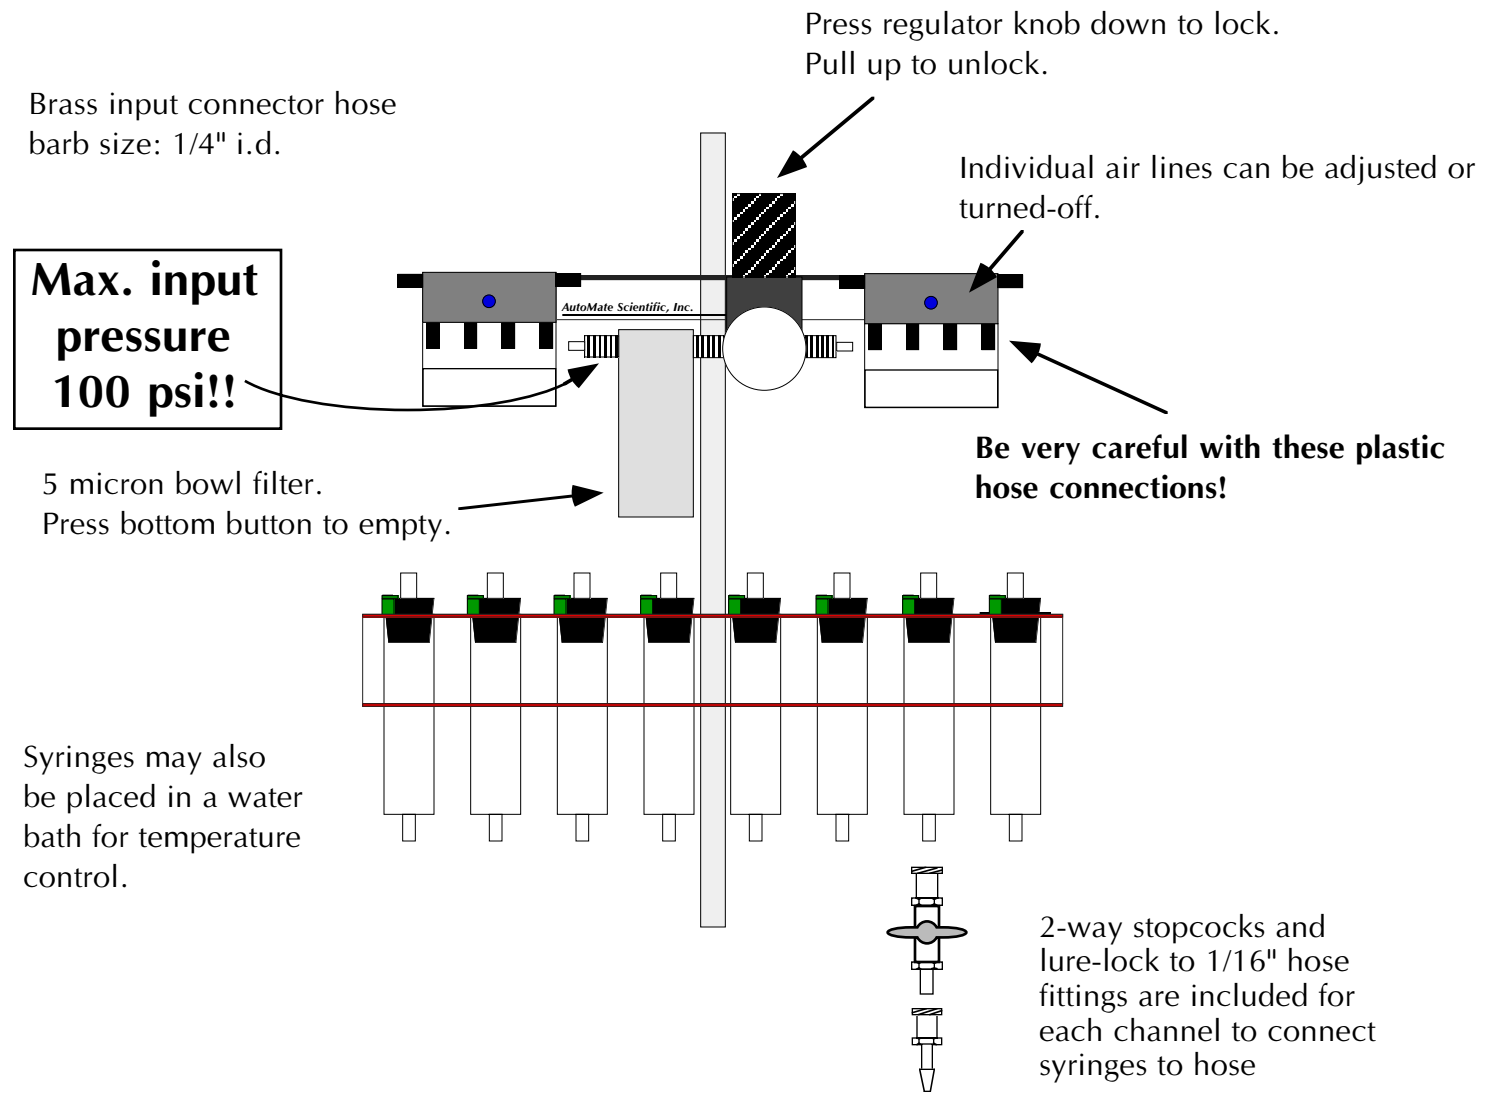

Hoses should continue from syringes to valves.



800.998.MATE | www.autom8.com | 650 University Ave #5, Berkeley, CA 94710 USA
tel 510.845.6283 | fax 510.665.3975 | e-mail info@autom8.com